

# ACCESSORY

## PRODUCT SHEET & SPECIFICATIONS

# EMERGENCY PUSH BUTTON

(MODEL G740)



### DESCRIPTION

The Emergency push button is used to activate a pre-recorded message or strobe in the event of an emergency or for alerting.

### FEATURES AND CAPABILITIES

- Manual activation of messages in the event of an emergency
- Manual activation of messages to alert or warn others
- Polycarbonate faceplate
- Stainless steel backplate
- Can be reset by depressing the "Push" button, and turning clockwise a  $\frac{1}{4}$  turn
- Comes with one (NO) contact and one (NC) contact
- Measurements: 5" H x 3 $\frac{1}{4}$ " W x 1 $\frac{1}{2}$ " D