



INSTALLATION
MANUAL

TANGENT SPEAKER

02 6-***

*/45**0*/4536**0/4

1. Refer to the sound masking layout (drawing) provided to locate the appropriate speaker installation position.
2. Cut a 4.2" hole in the drywall or acoustical ceiling tile
3. Install the Cat 5e cable with standard RJ45 connector into the speaker
4. **XXXXXXXXXX**
XXXXXXXXXX

Note: If a tile bridge is being installed. After hole is cut in the tile, lay tile bridge across the tile grid. Push the torsion springs back on speaker and put speaker through both ceiling tile and tile bridge before releasing springs to hold speaker in place in tile bridge.

1. "XXXX" **XXXX**
XX or to l To speaker
2. "XXXXXXXXXX"
XXXX
"X" c anne i a e on one ca e going to its l T on T ere i e no ca e
connecte to t e output

INSTALLATION DIAGRAMS



